

# The Party Corner

19 E. Newman Springs Rd. Shrewsbury, N.J. 07702  
732-741-0040 Fax: 732-747-1589

[www.partycorner.com](http://www.partycorner.com)

Email: [partycorner@msn.com](mailto:partycorner@msn.com)

*"So many reasons to party...but only one place to shop!"*

Since 1969, serving all your party and event rental needs.

## OPERATING INSTRUCTIONS LED ICE CARVING DISPLAY

NOT DISHWASHER SAFE! DO NOT IMMERSE IN LIQUID!

- 1) Plug into power supply – depress reset button fully and release. The red light should turn on. If red light does not turn on, check power supply.
- 2) Changing light pattern settings: TAP the red button on side.
- 3) Changing mode settings: PUSH and HOLD red button for one second.

Settings: 1 – sampler of all settings

2 – solid colors including double color combinations

3 – fade option between double color combinations

4 – flashes red, green, blue, all at once

5 – flashes through all colors including double color combinations

6 – sampler of all settings

7 – fades between all colors

8 – chaser pattern of red, green, blue

Modes:

Changing modes usually slows down light pattern of selected setting. Example: Slow fade mode for all colors – Turn on the unit, TAP the red control button 6 times to reach setting 7, then PUSH and HOLD then release the red button 2X to slow pattern

